



GDS_REST Settings for fixed job number

This manual is for setting up the GDS_Rest integration to always use job number 01 this is for customers who do not want to type in workorder **job** number in keypad, only workorder.


1. Open OCPSettings.exe program in Fluid System folder.

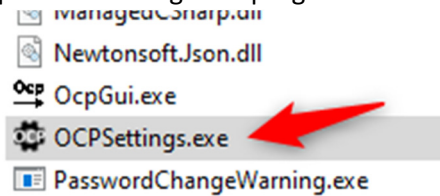

2. Go to setting **System_WoSplitChar** make sure it is empty.

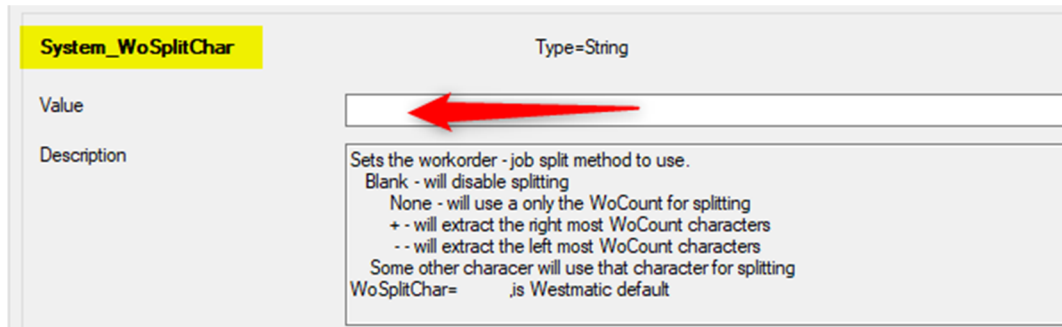

3. Go to **ForwardTransaction_Body** change “%@pr” to “01”.

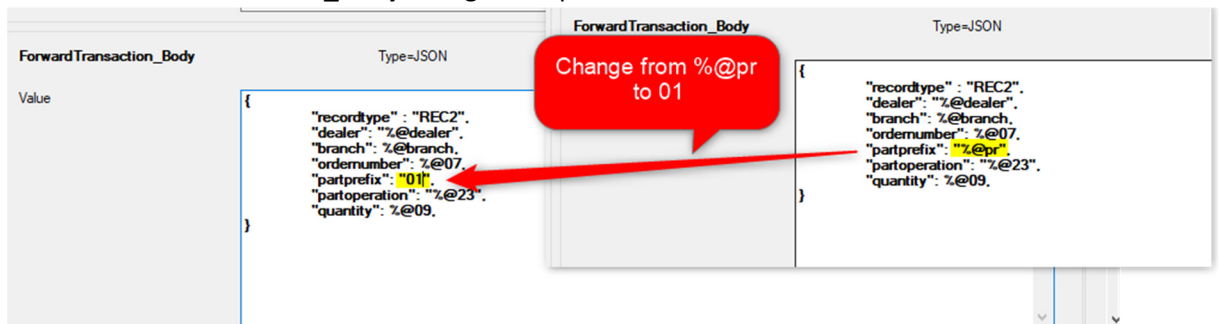

4. Klick “Save”.

