



SERIES ORH OPEN HOSE REEL

SERIE ORH ÖPPEN SLANGUPPRULLARE



Part No. / Art. Nr. / Réf.:
25885

DESCRIPTION

Extremely robust high delivery and high hose capacity. A pair of rugged reliable springs assist to rewind the hose. Heavy duty hose reel. All metal construction polyester powder coated.

FLUIDS	HOSE CAPACITY
Water, diesel fuel, suction, DEF.	1-1/2" 15 m (50')

INSTALLATION-OPERATION

Settle the hose reel over a horizontal robust surface. There are two different hose outlet positions available. To be able to change the hose outlet position, it is necessary:

1. Make sure the hose reel is firmly fixed over a horizontal surface.
2. The spool must be blocked by means of the ratchet, to avoid the power springs to turn it. To block the spool, extract the hose to the nearest blocking ratchet position. During the hose outlet substitution process, be careful not to let the spool turn freely.
3. Unscrew the bolts (1), take out the hose outlet rollers (2) , and disassemble the crosspiece (4) (fig. 1).
4. Orientate the hose (it is not necessary to disassemble the hose stopper) towards the new hose outlet position. To do this, grab firmly the hose, unlatch the spool and turn it until the hose reach its new position (fig. 2). Then, latch the spool again, at the nearest position.
5. Assemble between then, the hose outlet components took apart previously as shown (fig. 3), and take them to their new position as shown. Then, screw the bolts (3) (fig. 4).
6. Finally, assemble the crosspiece (4) (fig. 4) at the indicated position.

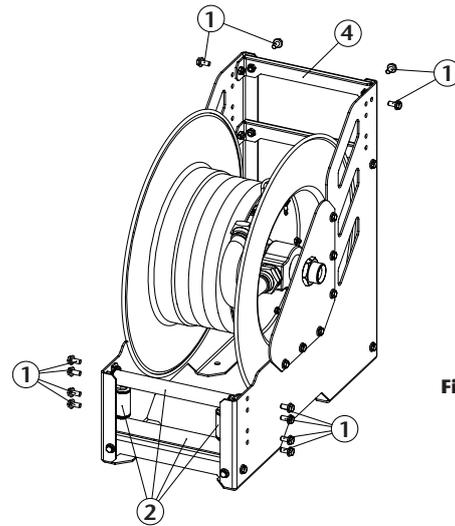


Fig. 1

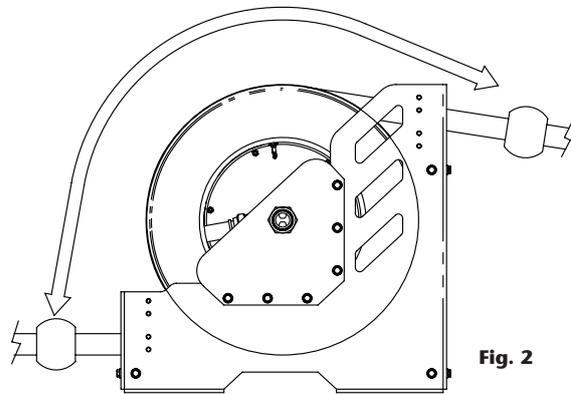


Fig. 2

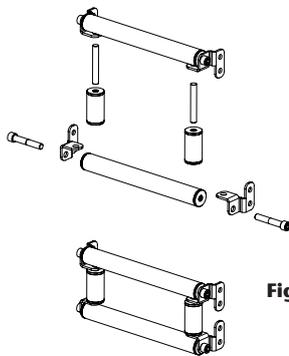


Fig. 3

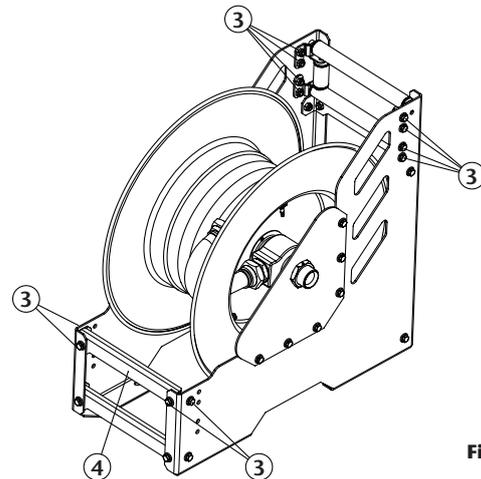


Fig. 4

MAINTENANCE

! **WARNING:** Before carrying out any kind of maintenance, close the nearest shut off valve to the hose reel and open the dispensing valve to relieve the pressure in the hose. The reel spring is under very high tension and can cause serious injury if it is released. Therefor, do not attempt to service the spring inside the reel.

HOSE INSTALLATION THE FIRST TIME

NOTE: During hose installation, tighten the U-bolt just till the hose gets slightly deformed. Do not overtighten the U-bolt, since the hose could be damaged.

To install the hose the first time, follow the next steps:

1. Make sure the power springs are relaxed, with no tension, in such a way that the spool does not try to turn (the ratchet must be unlocked).
2. Connect the new hose to the gooseneck (2), place the U-bolt (1) (fig. 5) in such a way that it firmly holds the hose against the spool, and start to wind the hose into the spool turning the spool manually.
3. Once the hose is completely wound around the spool (the power springs still will be with no tension), apply the pretension to the power springs by turning the spool the number or turns stated in the table depending on the hose length (see table), turning in positively direction as shown in (fig. 6). Do not apply more tension than stated, as the power springs could be damaged.
4. Pass the hose end through the roller outlet to the desired length, lock the spool with the ratchet in the nearest position and place the hose stopper (fig. 7) making sure the latch keeps accessible.
5. Fully unwind and rewind the hose to make sure the power springs are correctly tensioned. The hose reel is equipped with 2 strong power springs working in parallel to assist during the hose rewinding.

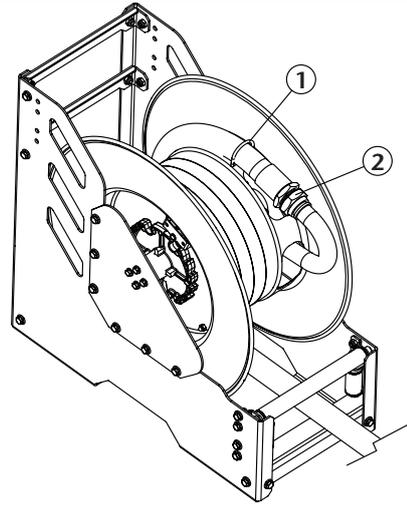


Fig. 5

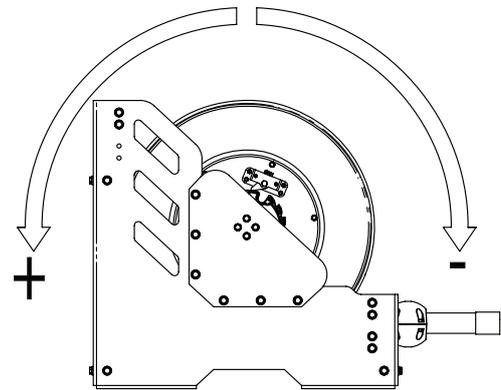


Fig. 6

HOSE LENGTH	HOSE 1 1-2"
15 m (50')	+ 7 turns

HOSE REPLACEMENT

NOTE: During hose installation, tighten the U-bolt just till the hose gets slightly deformed. Do not overtighten the U-bolt, since the hose could be damaged.

1. Ensure the reel is firmly attached. Take the hose fully out and let the spool blocked by the ratchet mechanism.

NOTE: beware the spool to get loose and start turning freely.

2. Remove the U-bolt (1) by loosening its nuts and disconnect the hose from the gooseneck (2) (fig. 5).
3. Take away the hose from the spool and remove the hose stopper in order to use it with the new hose.
4. Connect the new hose to the gooseneck. Place the U-bolt in such a way that it firmly holds the hose against the spool, and pull the hose in order to unlock the ratchet.
5. Allow the hose to slowly wind into the spool and ensure to finish with the whole hose inside the reel and the power springs with no tension (in such a way that the spool does not try to turn).
6. Apply the pre-tension to the power springs by turning the spool towards positive direction, the number of turns indicated in (fig. 6), depending on the hose length. Do not apply more tension than stated, as the power spring could be damaged.
7. Pass the hose end through the roller outlet to the desired length, lock the spool with the ratchet in the nearest position and place the hose stopper (fig. 7) making sure the latch keeps accessible.
8. Fully unwind and rewind the hose to make sure the power spring is correctly tensioned. The hose reel is equipped with 2 strong power springs working in parallel to assist during the hose rewinding.



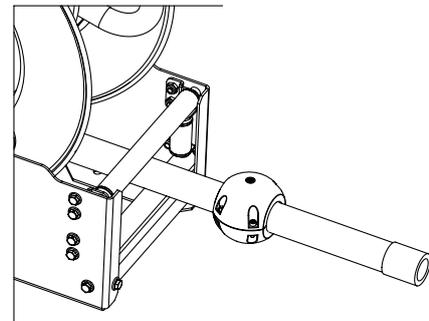


Fig. 7

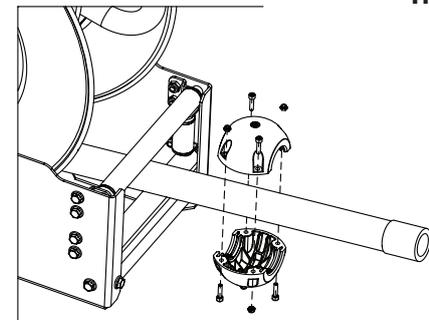



LATCH REPLACEMENT

1. With the hose fully wound on the spool and the hose stopper touching the rollers, turn the spool enough to be able to reach the ratchet assembly. Make sure to avoid the spool to turn freely, blocking it safely.
2. Loosen the 2 bolts (1) (Fig. 6), and the 4 nuts (2) (Fig. 6). Remove the ratchet assembly.
3. Clean the components, or replace the ratchet assembly with a new one. In the case of unscrewing the ratchet shaft (3) (Fig. 6), be sure to clean the thread and apply medium-strength threadlocker before screwing it back into the plate (4) (Fig. 6).
4. Assemble the ratchet assembly in place and tight the 2 bolts (1) (Fig. 6) and the 4 nuts (2) (Fig. 6).
5. Make sure the ratchet assembly works properly.

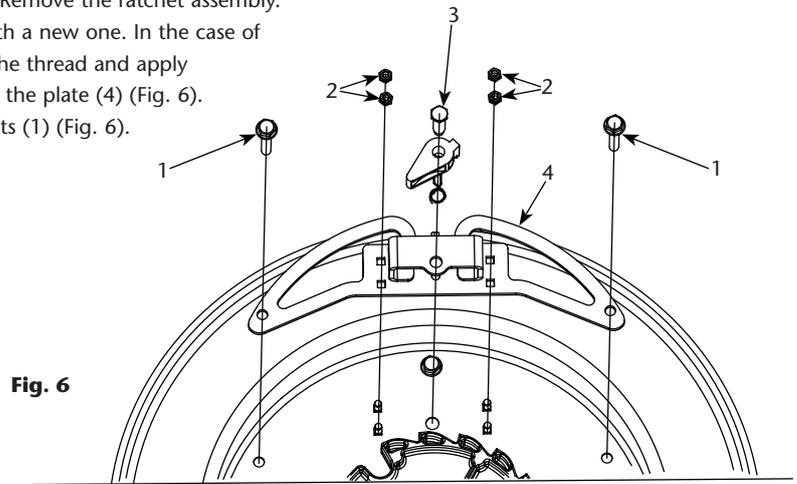

DIMENSIONS / DIMENSIONES / DIMENSÕES / РАЗМЕРЫ

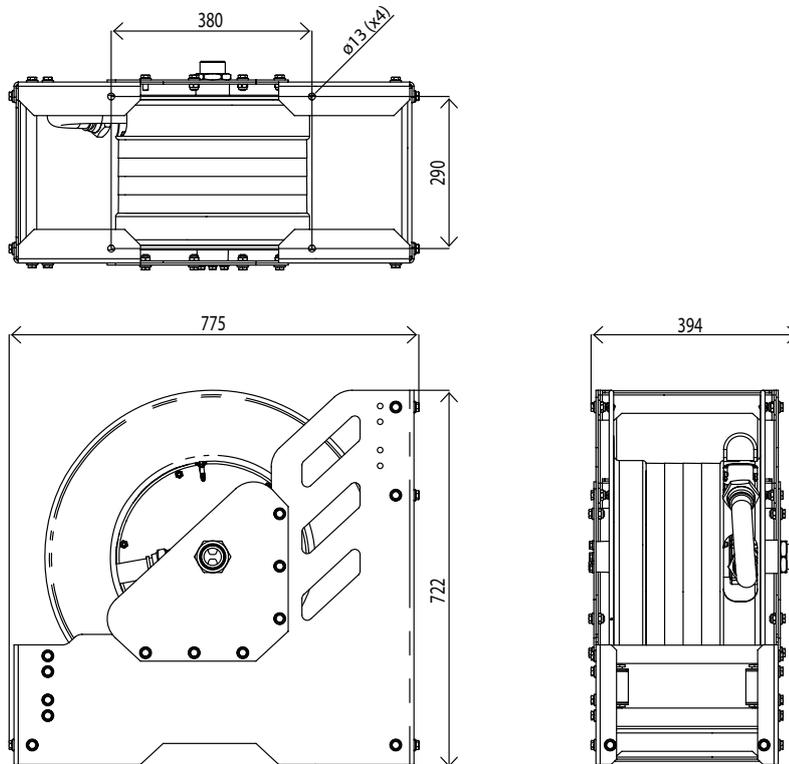

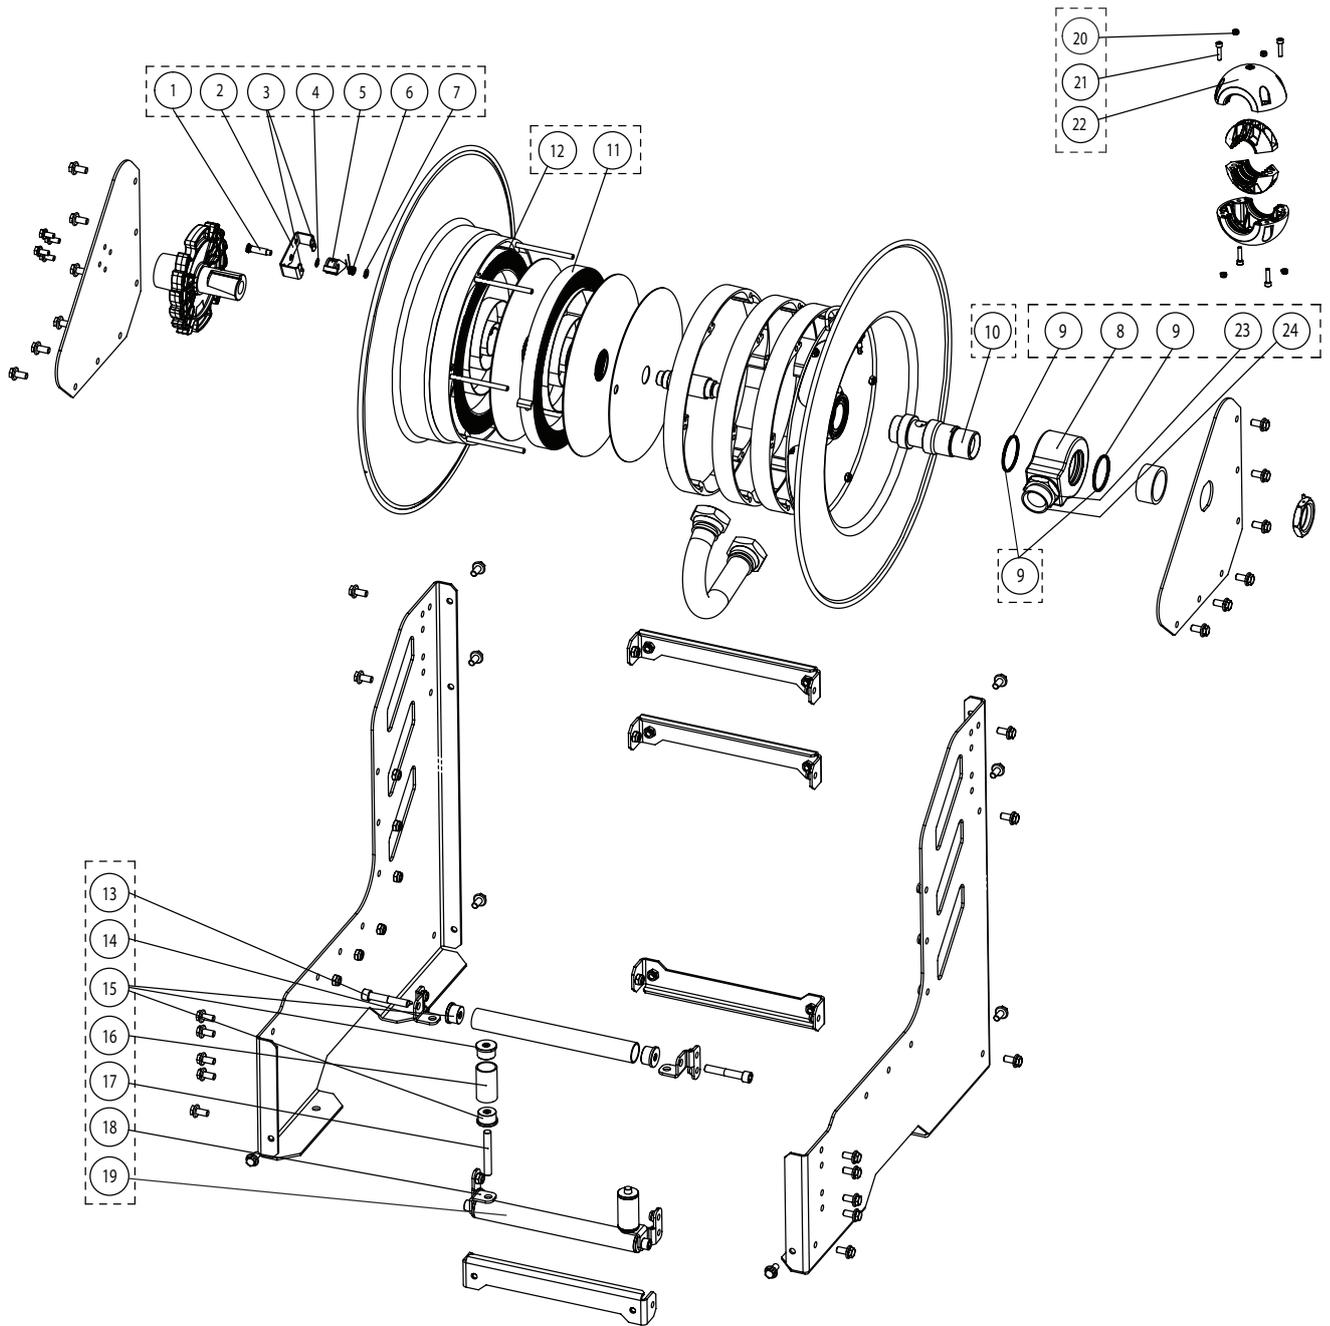

FOR REEL 25885	CONSIST OF	POS.	QUANTITY / ANTAL
2588501	Latch assembly	1, 2, 2x(3), 4, 5, 6, 7	1
2588502	Roller outlet assembly	4x(13), 2x(14), 8x(15), 2x(16), 2x(17), 2x(18), 2x(19)	1
2588503	Swivel seals	2x(9)	4
2588504	Inlet shaft	10	1
2588505	Swivel assembly	8, 2x(9), 23, 24	2
2588506	Hose stopper assembly	4x(20), 4x(21), 2x(22)	1
2588507	Power springs	11, 12	
2588508	Outlet hose 15m x 1-1/2"	-	
2588509	Inlet hose 1m x 1-1/2"	-	

EN Alentec&Orion AB, Grustagsvägen 4, SE-13840, Älta, Sweden, declares by the present certificate that the mentioned machinery is in conformity with the following standards or other normative documents (TÜV S9211282), (DIN 24558 / 10.91), (DIN EN 292 / 2/11.91) and has been declared in conformity with the EC Directive **(2006/42/EEC)**.

SE Alentec&Orion AB, Grustagsvägen 4, SE-13840, Älta, Sverige, deklarerar genom detta certifikat att de omnämnda utrustningarna är i överensstämmelse med följande standarder eller normerande dokument (TÜV S9211282), (DIN 24558 / 10.91), (DIN EN 292 / 2/11.91) och har blivit deklarerade i enlighet med EC Direktiv **(2006/42/EEC)**.



Krister Tynhage
Managing Director



Olle Berglund
Product Manager