

AdBlue[®] NOZZLE WITH OVERFILLING INDICATOR

AdBlue[®] MÄTVERK MED ÖVERFYLLNADSINDIKATOR



HOW TO USE:


- Start dispensing by squeezing the trigger (1).
- When the fluid level reaches the second metal ring on the outlet hose (2), a red light on the meter housing will turn on (3).
- At that point, release the trigger to prevent overfilling.

Additional functions of the meter are explained in the meter manual (25052) and the valve manual (20205).

ANVÄNDNING:

- Starta tappningen genom att trycka in avtryckaren (1).
- När vätskenivån når den andra metallringen på utloppets slang (2), tänds en röd lampa på mätarhuset (3).
- Släpp då avtryckaren för att undvika överfyllning.

Ytterligare funktioner för mätaren förklaras i mätarmanualen (25052) och ventilmmanualen (20205).

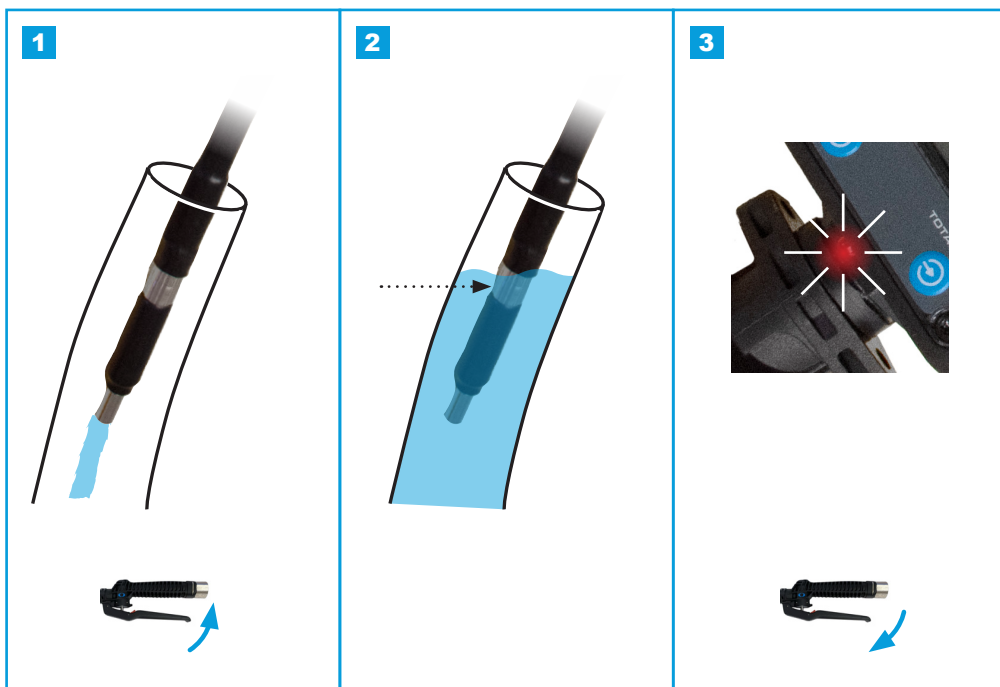

Part No. / Art. Nr. / Réf.:
70211